

赤枠内の条件式を変更

おねじ追加工 ベアリングナット用		BV BC BQ BR	軸端におねじ追加工を追加します。	<table border="1"> <thead> <tr> <th>軸端径</th> <th>M×Pitch</th> </tr> </thead> <tbody> <tr><td>6</td><td>M 6×0.75</td></tr> <tr><td>8</td><td>M8×1.0</td></tr> <tr><td>10</td><td>M10×1.0</td></tr> <tr><td>12</td><td>M12×1.0</td></tr> <tr><td>14</td><td>M14×1.0</td></tr> <tr><td>15</td><td>M15×1.0</td></tr> <tr><td>17</td><td>M17×1.0</td></tr> <tr><td>20</td><td>M20×1.0</td></tr> <tr><td>25</td><td>M25×1.5</td></tr> <tr><td>30</td><td>M30×1.5</td></tr> <tr><td>35</td><td>M35×1.5</td></tr> <tr><td>40</td><td>M40×1.5</td></tr> </tbody> </table>	軸端径	M×Pitch	6	M 6×0.75	8	M8×1.0	10	M10×1.0	12	M12×1.0	14	M14×1.0	15	M15×1.0	17	M17×1.0	20	M20×1.0	25	M25×1.5	30	M30×1.5	35	M35×1.5	40	M40×1.5	200
			軸端径	M×Pitch																											
6	M 6×0.75																														
8	M8×1.0																														
10	M10×1.0																														
12	M12×1.0																														
14	M14×1.0																														
15	M15×1.0																														
17	M17×1.0																														
20	M20×1.0																														
25	M25×1.5																														
30	M30×1.5																														
35	M35×1.5																														
40	M40×1.5																														
指定方法 BC20 右表より選択 使用用途 ゆるみ止めベアリングナット 取付用途 <input checked="" type="checkbox"/> P.940 ⊗軸端径7・9・16適応不可 ⊕タップ長さ≤M×3 ⊕タップ長さ≥ピッチ×3 ⊕タップ長さ≤軸端長ーピッチ×3																															

<訂正用>

おねじ追加工 ベアリングナット用		BV BC BQ BR	軸端におねじ追加工を追加します。	<table border="1"> <thead> <tr> <th>軸端径</th> <th>M×Pitch</th> </tr> </thead> <tbody> <tr><td>6</td><td>M 6×0.75</td></tr> <tr><td>8</td><td>M8×1.0</td></tr> <tr><td>10</td><td>M10×1.0</td></tr> <tr><td>12</td><td>M12×1.0</td></tr> <tr><td>14</td><td>M14×1.0</td></tr> <tr><td>15</td><td>M15×1.0</td></tr> <tr><td>17</td><td>M17×1.0</td></tr> <tr><td>20</td><td>M20×1.0</td></tr> <tr><td>25</td><td>M25×1.5</td></tr> <tr><td>30</td><td>M30×1.5</td></tr> <tr><td>35</td><td>M35×1.5</td></tr> <tr><td>40</td><td>M40×1.5</td></tr> </tbody> </table>	軸端径	M×Pitch	6	M 6×0.75	8	M8×1.0	10	M10×1.0	12	M12×1.0	14	M14×1.0	15	M15×1.0	17	M17×1.0	20	M20×1.0	25	M25×1.5	30	M30×1.5	35	M35×1.5	40	M40×1.5	200
			軸端径	M×Pitch																											
6	M 6×0.75																														
8	M8×1.0																														
10	M10×1.0																														
12	M12×1.0																														
14	M14×1.0																														
15	M15×1.0																														
17	M17×1.0																														
20	M20×1.0																														
25	M25×1.5																														
30	M30×1.5																														
35	M35×1.5																														
40	M40×1.5																														
指定方法 BC20 右表より選択 使用用途 ゆるみ止めベアリングナット 取付用途 <input checked="" type="checkbox"/> P.940 ⊗軸端径7・9・16適応不可 ⊕タップ長さ≤M×3 ⊕タップ長さ≥ピッチ×3 ⊕タップ長さ≤軸端長ーピッチ×3																															